


De-clicking a Technics SL-1200 / SL-1210 Mk2 pitch slider




1, Carefully bend the 8 lugs which are holding the printed circuit board



2, Carefully remove the printed circuit board paying attention to which way it came out

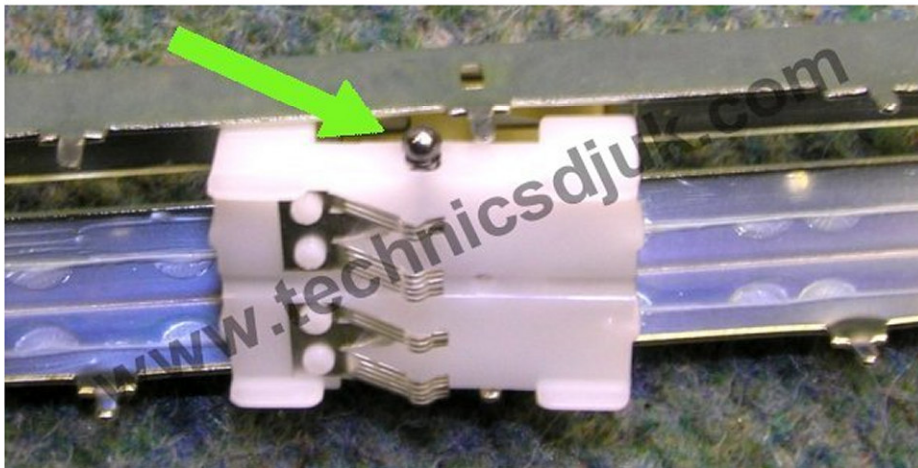

3, Carefully pull out the slide assy and remove the ball bearing and spring

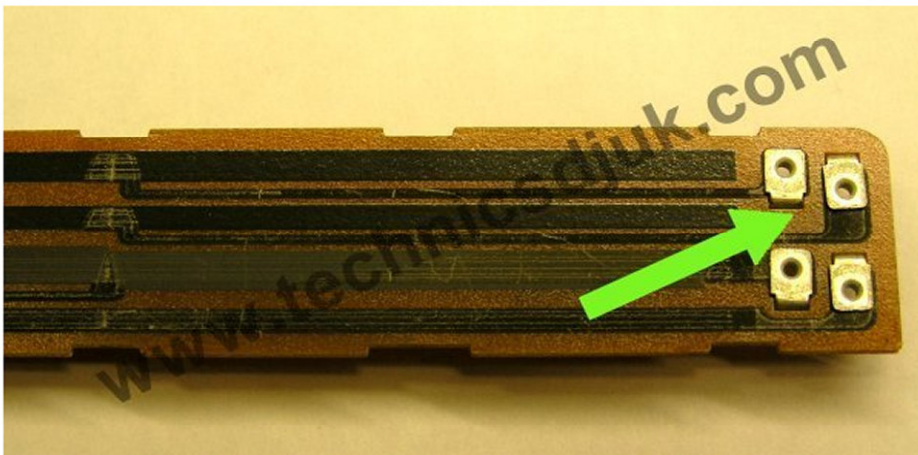

4, **OPTIONAL** - If you **DO NOT** want your deck to "0% lock" in the center position cut the feed to either one of the pins indicated by the arrow or you can simply cut off one of the pins on the pitch slider itself.

Re-assemble you slider and your done!